


Instruction Sheet

This kit fits most utility wagons and carts with 16mm (5/8") diameter OEM axles ONLY!

Parts:

- a) Axle Extenders (4)
- b) Plastic Wheel Spacers (4)
- c) Hex Bolts - Long (8)
- d) Hex Bolts - Short (8)
- e) Flat Washers (8)
- f) Nylock Nuts (8)
- g) Quick Clip Pins (6)
- h) Backing Washers - Non-Slotted (4)*
- i) Backing Washers - Slotted (4)*
- j) WZ1-24UB Wheels (4)

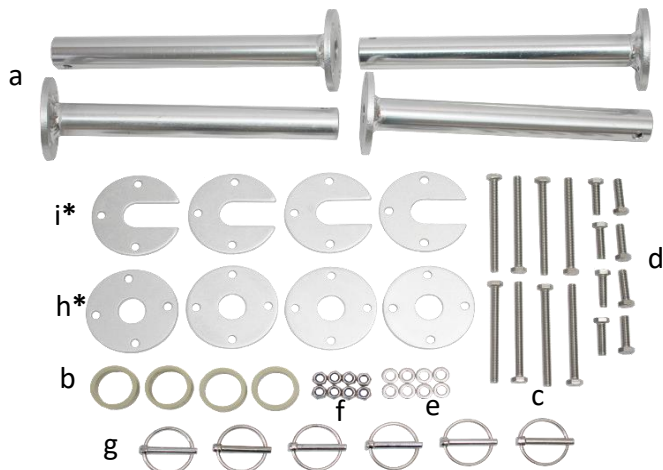

1. Remove stock wheels from wagon.



2. Install axles (a), backing washers (h,i)*, bolts (c,d), washers (e), and nuts (f) - tighten securely.

Note: Use (2) bolts, washers and nuts per axle.

* Kit includes (4) Slotted washers and (4) non-slotted washers. Use slotted where OEM axle extends past axle support on the inner surface. Use (2) appropriate length bolts to secure axles and washers.



3. Install wheel spacers (b), wheels (j) and QCP (g).



Maximum Payload With Wheelleez® Balloon Wheels - 160 kg (350 lbs)
However, DO NOT EXCEED Wagon Manufacturers Payload Limit

View installation video at www.wheelleez.com/